



# **BF1 – Frequency relay**

**(November 1997)** 

Manual BF1 (Revision New)

Woodward Manual BF1 GB

Woodward Governor Company reserves the right to update any portion of this publication at any time. Information provided by Woodward Governor Company is believed to be correct and reliable. However, no responsibility is assumed by Woodward Governor Company unless otherwise expressly undertaken.

© Woodward 1994-2008

Manual BF1 GB Woodward

#### **Application**

Under- and overfrequency supervision of single or three-phase systems.

#### **Function**

The unit BF1 is equipped with an independent over- (f>) and underfrequency supervision (f<) with separate adjustable pickup values and trip delays. The measured frequency is continuously compared with the set reference values.

For frequency supervision the cycle duration is evaluated and so measuring is virtually independent on harmonics. To avoid tripping during normal operation due to interference voltages, a fixed measuring repetition is used.

**Technical data** 

rated voltage Un: 110 V, 230 V, 400 V AC

frequency range at

50 Hz rated frequency: 46 - 54 Hz 60 Hz rated frequency: 55,2 - 64,8 Hz

hysteresis: 0,5% of nominal frequency

power consumption: 3,7 VA

thermal load carrying capacity: continuously 1,3 x Un

returning time: 250 ms minimum operating time: 250 ms

Output relays:

max. breaking capacity

ohmic: 250 V AC/120 W DC inductive: 500 V AC/75 W DC

rated current: 5 A making current: 20 A

System data:

regulations: VDE 0435 part 303

temperature range at

storage and operation: - 25°C bis + 70°C

Mechanical stress:

shock: class 1 acc. to DIN IEC 255-21-2 vibration: class 1 acc. to DIN IEC 255-21-1

degree of protection: IP 40 at closed front cover

weight: approx. 0,5 kg

mounting position: any

Woodward Manual BF1 GB

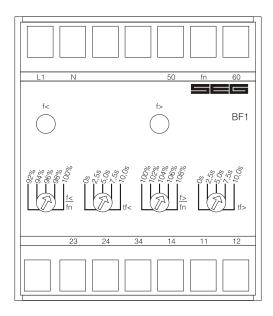


Figure 1: Front plate

The unit BF1 is designed to be fastened onto a DIN-rail acc. to DIN EN 50022 same as all units of the BASIC LINE.

The front plate of the unit is protected with a sealable transparent cover (IP40).

Please remove the transparent cover with a screw driver to adjust the relay.

## **LEDs**

LED f< is used to indicate operation without fault with steady light. LEDs f> and f< indicate pickup of the relay by flashing. At underfrequency tripping LED f< extinguishes. LED f> indicates tripping at overfrequency (steady light).

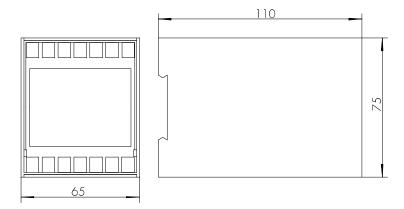


Figure 2: Dimensional drawing of BF1

Manual BF1 GB Woodward

## **Auxiliary voltage supply**

The unit BF1 needs no separate auxiliary voltage supply. The supply voltage can be formed directly from the measuring quantity.

## 3 wire system 100 or 110 V and 400 V

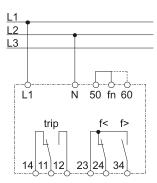


Figure 3: Connection diagram BF1-110

## 4 wire system 400/230 V

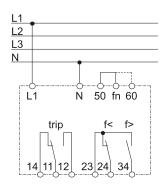


Figure 4: Connection diagram BF1-230

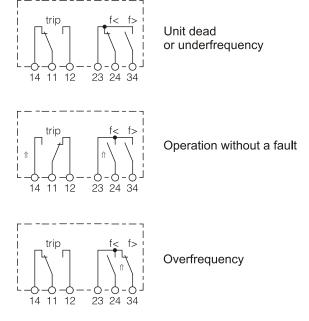


Figure 6: Contact positions

Woodward Manual BF1 GB

#### **Connection terminals**

The connection up to a maximum of  $2 \times 2.5 \text{ mm}^2$  cross-section conductors is possible. For this procedure the transparent cover of the unit has to be removed.

## **Setting ranges**

f<: 92 - 100 %•fn tf<: 0 - 10 s f>: 100 - 108 %•fn tf>: 0 - 10 s

## **Order form**

Frequency relay		BF1	
Rated voltage	110 V/AC 120 V/AC 230 V/AC 400 V/AC		110 120 230 400





#### Woodward SEG GmbH & Co. KG

Krefelder Weg 47 · D – 47906 Kempen (Germany)
Postfach 10 07 55 (P.O.Box) · D – 47884 Kempen (Germany)
Phone: +49 (0) 21 52 145 1

## Internet

Homepage http://www.woodward-seg.com Documentation http://doc.seg-pp.com

## Sales

Phone: +49 (0) 21 52 145 635 · Telefax: +49 (0) 21 52 145 354 e-mail: kemp.electronics@woodward.com

## Service

Phone: +49 (0) 21 52 145 614 · Telefax: +49 (0) 21 52 145 455 e-mail: kemp.pd@woodward.com