



NV-7

www.tokoelektrikmurah.com

menu mode

- 1 - C / K
- 2 - Target cos ϕ
- 3 - Step Interval
- 4 - Program Sequence
- 5 - Number of connected step
- 6 - V > (Overvoltage)
- 7 - Freq. (Hz)
- 8 - Freq. (Hz) (H)
- 9 - Operation hr. $\times$ 1000 (info)
- R - Alarm Info

* Manual

COS ϕ

Ind

Cap

HP/WA: 0852-195-111-00

Program Sequence

P-0	Linear
P-1	1 1 1 1 1
P-2	1 2 2 2 2
P-3	1 2 2 2 2
P-4	1 1 1 2 2
P-5	1 2 4 4 4
P-6	1 1 2 2 4

Select
SecMode
Selection
Setting

▲

Lib

▼

Auto
Manual
ControlHold 2 sec
for Manual
mode

Email: ipowersolution@hotmail.com

IPower
SOLUTION