


T5 Pro/T5

Professional Access Control Reader
Quick Guide v2.0

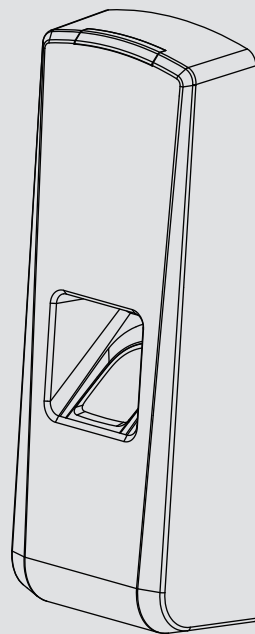


ANVIZ®


Anviz brand and product are trademarked and protected under law of the United States. Unauthorized use is prohibited.

For more information, please visit www.anviz.com, or send email to sales@anviz.com for more help.
©2018 Anviz Global Inc. All Rights Reserved.

1. Package list

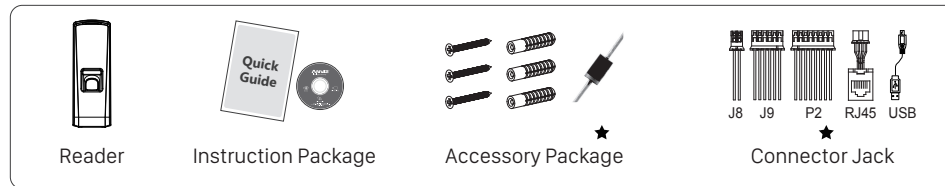


2. Installation Diagram

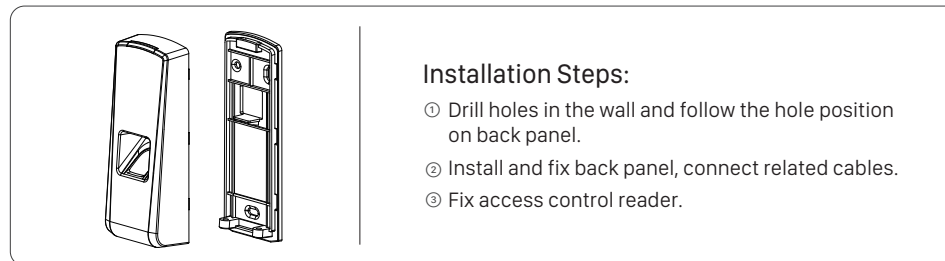

3. Wiring Instruction

The interface marked with ★ for specific models, Please according to the practical device to wire.

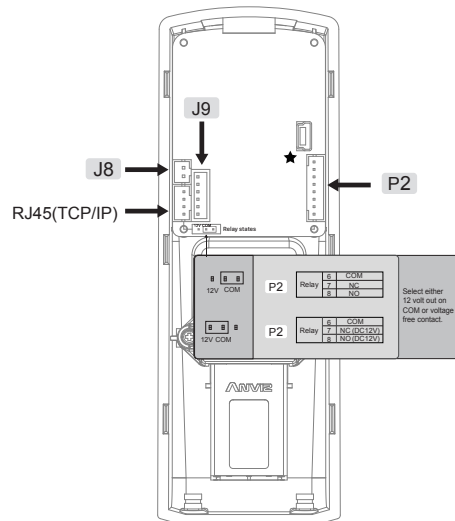

Function	PIN	Description
Power	1	DC12V
	2	GND


Function	PIN	Description
Wiegand Output	1	Wiegand DATA0 Output
	2	Wiegand DATA1 Output
	3	GND
RS485	4	RS485A
	5	RS485B
	6	GND

Function	PIN	Description
Door Sensor	1	Trigger Input
	2	Trigger Input
	3	
GND	4	
	5	GND
Relay	6	COM
	7	NC
	8	NO



Important Notice

Please carefully follow this wiring diagram, If the reader gets damaged by incorrect wiring then your warranty will be void.


4. Access Control Reader & Power Supply

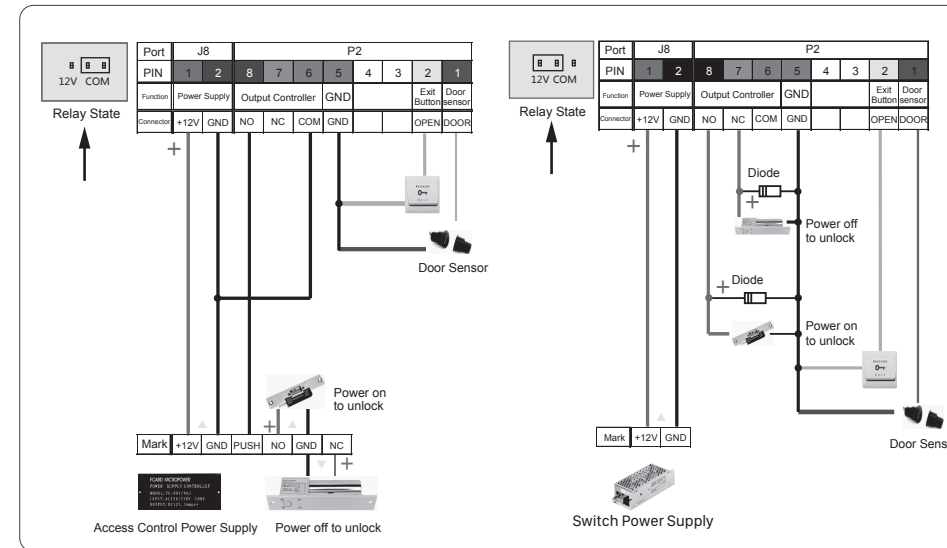


5. Access Control Reader & Controller 6. Communicate with PC

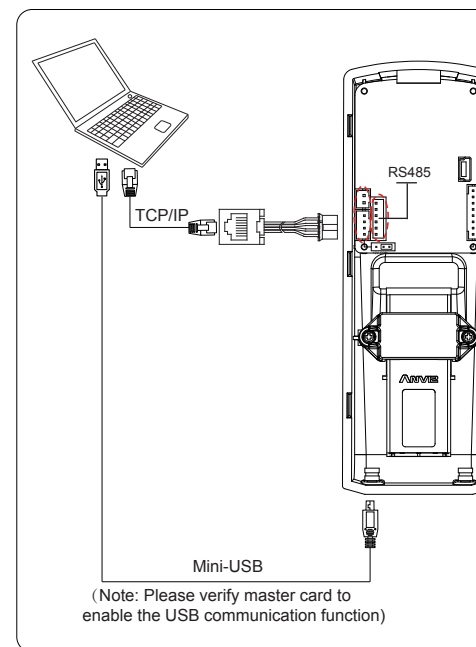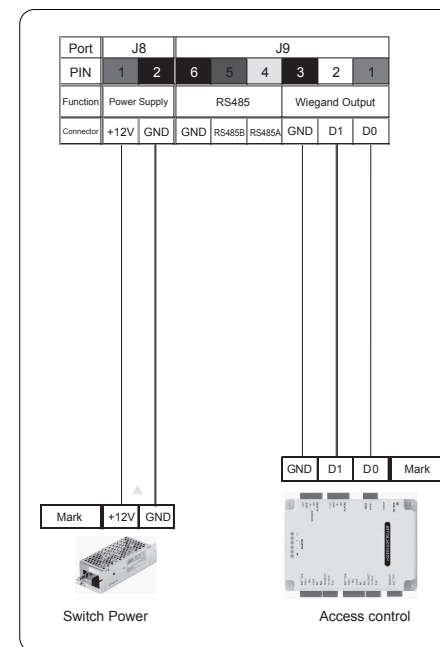

7. Reader Appearance



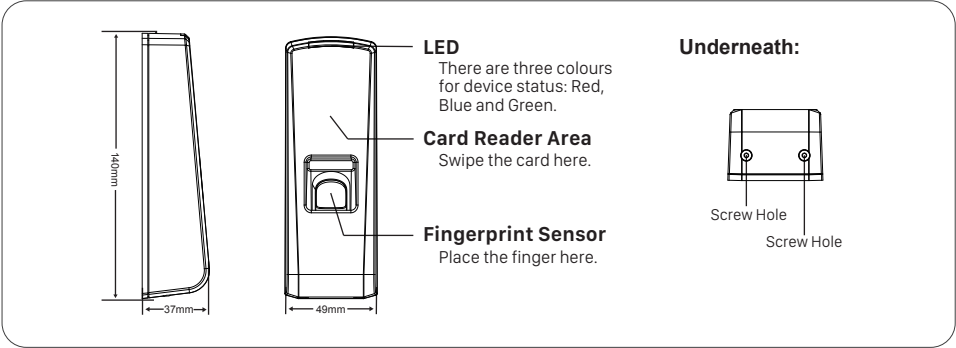


8. Illustration for placing finger


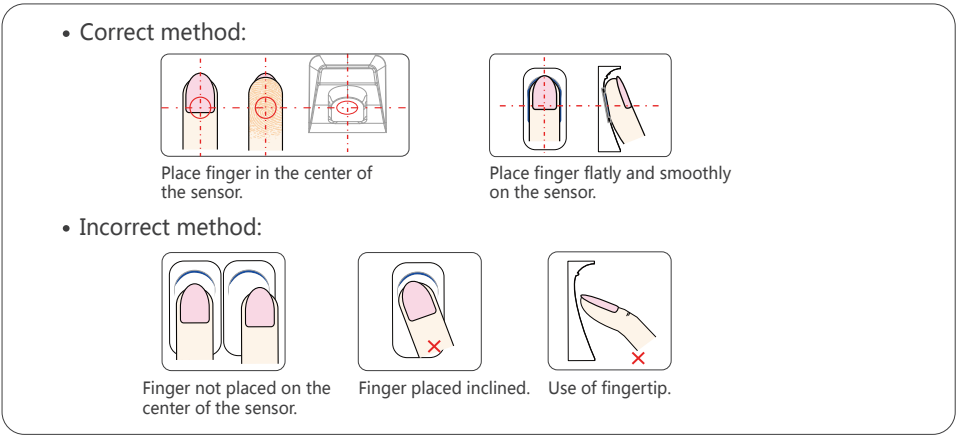


9. Operation Guide

- Power On:
Power the device by DC 12V and blue LED flashes fast and Fingerprint Sensor lights with beeps. There are 4 cards in the package: Enroll Card, Delete Card, User Card * 2
- User registration :

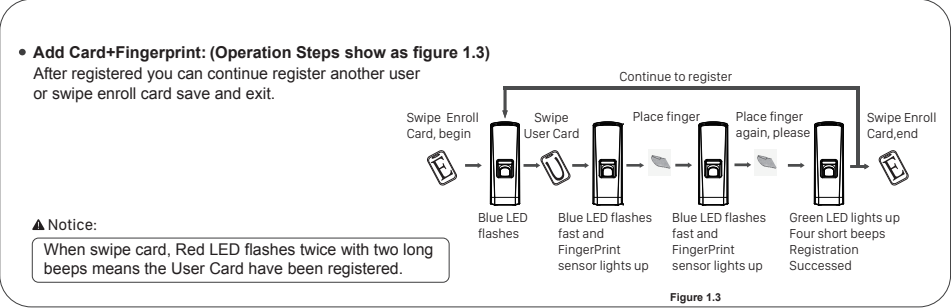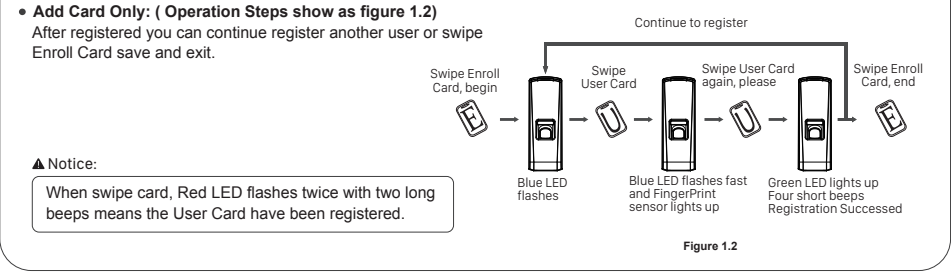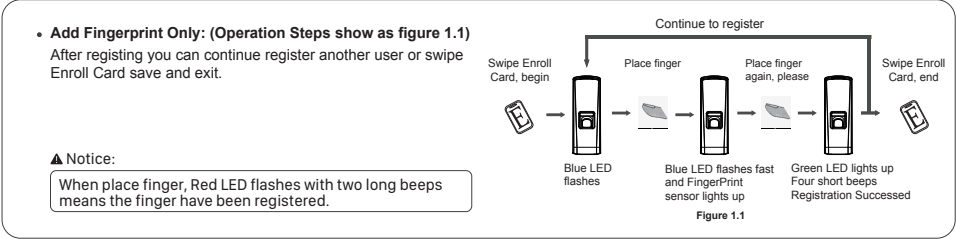

• Delete User:

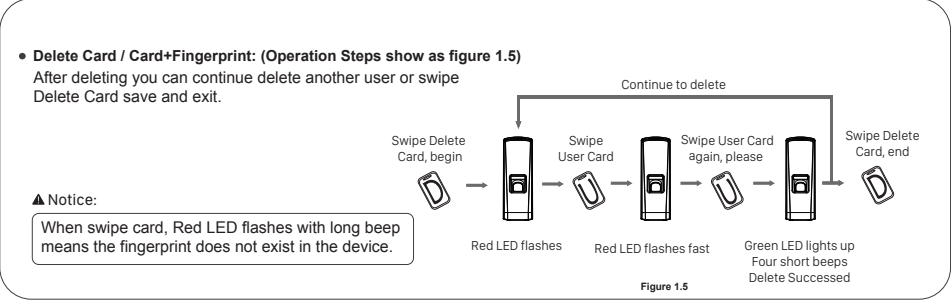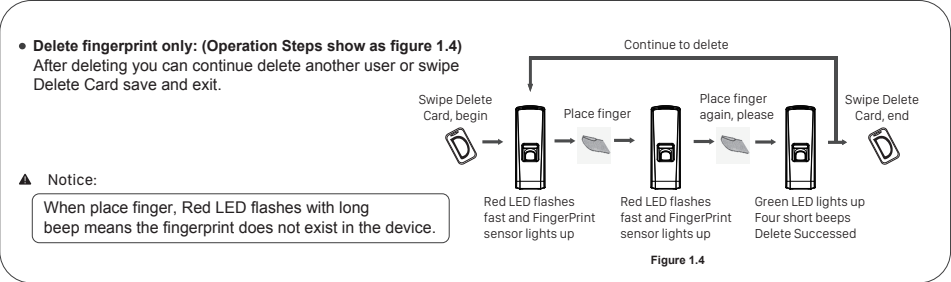

10. Function button

- Function Button
Press the button until heard beeps, that eliminate Enroll Card and Delete Card information in the device. After that MUST register management cards (Enroll Card and Delete Card) to run the machine.

▲ Notice:
The operation will not delete any user data stored in the device.

Function Button

