PERSONAL ORP TESTER MODEL 650

SPECIFICATIONS:

-Range: -999 to +999mV

-Resolution: 1mV

-Accuracy: $\pm 0.2\% \pm 1 \text{mV}$

-Calibration: Gain adjust by trimmer -Batteries: 4x1.5V(LR44 or equivalent)


-Battery Life: 400 Hours

-Dimensions: 158mm L x 34mm W x 17mm H

-Weight: 60g(typical)

Operating Instruction for ORP Tester

- -Remove the black protective cap if available.
- -Turn on the ORP Tester with the ON/OFF switch located on top.
- -The dip level must be kept below the immersion level,per Fig.1
- -Stir gently and wait a few seconds.
- -Pull out the battery case to change batteries, refer to Fig.1
- -For negative ORP measurements, the "-" sign will appear, refer to Fig. 2
- -When not in use, switch off ORP Tester and replace the protective cap.

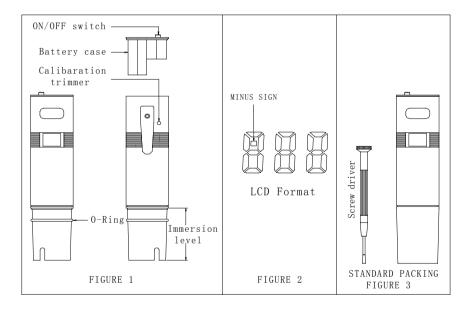

JENCO ELECTRONICS,LTD. NO. 26, SEC.2, FENLIAU RD., LINKOU SHANG, TAIPEI HSIEN, TAIWAN TEL:02-2601-6191 FAX:02-2601-7206 JENCO INSTRUMENTS,INC. 7968 ARJONS DRIVE,SUITE C. SAN DIEGO,CA 92126 U.S.A. TEL:858-578-2828

FAX:858-578-2886

使用说明书 (英文)		
机型: 650	编制人: T.C CHEN	1991-6-29
文件编号: M650-1	修改人:杨启娜	2005-8-30
版本: 03	核准人: T.C CHEN	2005-8-30

2005-8-5修改: 修正了部分书写错误mg, seconds.

2005-8-11修改:重量单位改回g, 原修改错误.

2005-8-30修改: 台北地址修改。