

Mira DS Handheld Identification System

Safe in-field identification of
explosives and illicit substances



Respond to threats faster and safer than

Is it a lethal threat or just a harmless powder? How big is your risk – and that of everyone else around? The faster you know this, the faster you can make the right decisions – potentially saving lives. It is exactly situations like this, in which you can rely on your Mira DS, the latest handheld material identification system from Metrohm.



For police officers, hazmat teams, and military personnel

The Mira DS' intuitive design requires no instruction at all: Turn it on, put it on the sample, press a button, and get the result – that's it! How does it work?

The Mira DS uses lasers to collect a unique optical fingerprint. This fingerprint is then identified by matching it against thousands of entries stored in libraries on the Mira DS. The data you collect is saved and stored for report generation.



**eats faster
ever!**



Your safety is o

Unique flexibility to keep you protected

With a uniquely comprehensive set of sampling attachments, the Mira DS allows you to avoid contact with unknown substances.

Identify substances from a distance with the Stand-off Attachment, e.g., by standing in a door way and scanning a container from across the room.



Identify powders in a baggy with the Right Angle Attachment. **Ideal for checking a sample on the hood of a squad car.**

ur priority


1

Identify liquids and powders in plastic bags and through bottles using the Universal Attachment.



Identify substances with the Contact Ball Probe Attachment by simply contacting the liquid or powder with the probe.

2

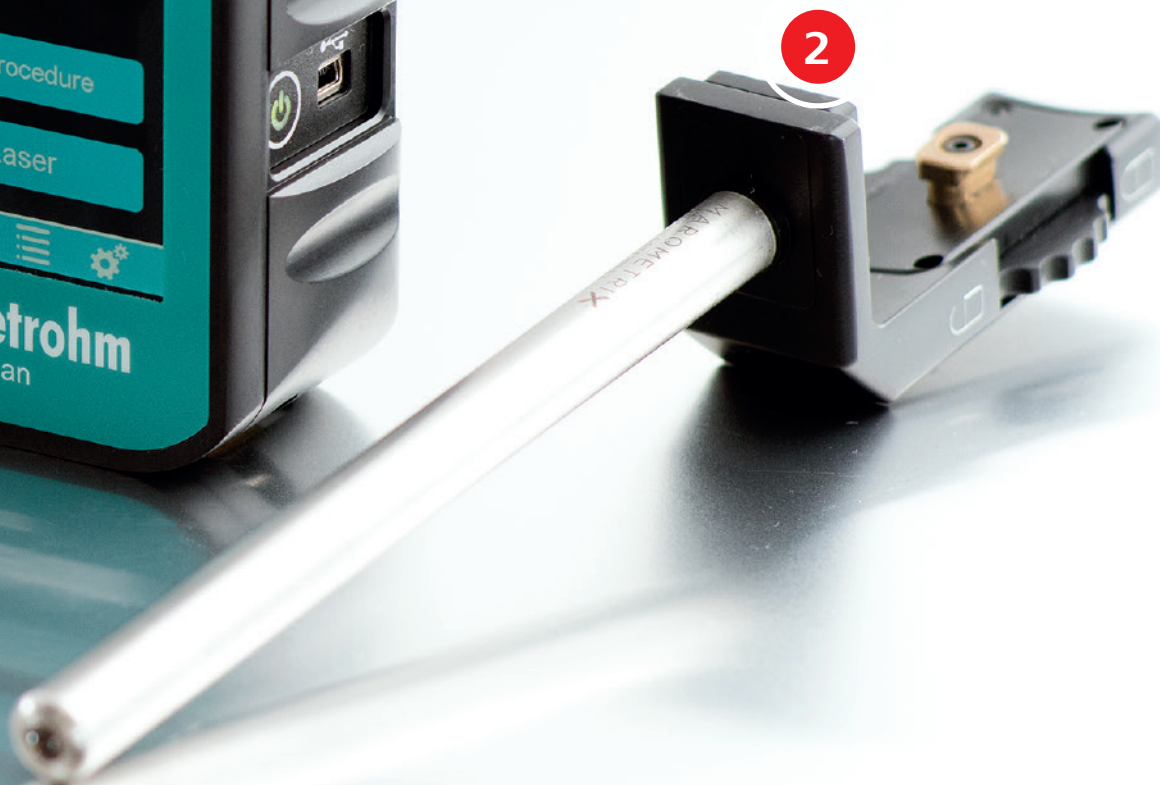

When identifying explosives, you can adjust the laser power of your Mira DS and set a scan delay to allow you to distance yourself from the measurement.

Made for tough

Barely larger than a smart phone the Mira DS enables true single handed operation. With a weight of just 705 grams, you can carry your Mira DS around in your pocket without even noticing it while on your mission.

The Mira DS is engineered to perform reliably even under toughest conditions. It's rugged design meets the specifications of MIL-STD 810G as defined by ...

- Method 501.5 (High Temperature)
- Method 502.5 (Low Temperature)
- Method 512.5 (Immersion, IP67)
- Method 514.6 (Vibration)
- Method 516.6 (Mechanical Shock)



est conditions



In-field risk management with the HazMasterG3



HazMasterG3
NITRIC ACID, FUMING



In the field you want to know more than just the identity of an unknown substance. Interface your Mira DS with the proven HazMasterG3 Software mobile app and you get additional, vital information on the substance you are facing. With this info provided, you can take appropriate action without the loss of valuable time.

Management asterG3 App



rd: Deadly
Will not burn
Instable if heated
dizer

?.
?.
?.

Return

Powerful mi



Mixture matching

Identify individual substances in mixtures

It is often mixtures that you are dealing with, not pure substances. No problem for the Mira DS! Thanks to a unique sampling method called Orbital Raster Scanning (ORS) and the Mira DS' powerful matching algorithm, you can identify with utmost confidence individual components within the powder or liquid sample.

Trace Detection of Substances

To increase the sensitivity of the Mira DS, it is compatible with Surface Enhanced Raman Scattering (SERS) substrates. This technology enables the detection of illicit drugs even when they are present in trace quantities. SERS substrates kits are available directly through Metrohm.

On-site support with the Mira App

Having difficulties identifying a sample on site? **Use the Mira App to send the data to your chemical support team** and tap into their expertise to assist you.



Subject to change without prior notice
Layout by Elektro- und Schweiß ASW, printed by Metrohm AG, CH-9100 Herisau, Switzerland
8-923-5003EN - 2018-05

www.metrohm.com

 **Metrohm**
Raman